

To be the Chief Evangelist

Ender-3 Pro Series 3D Printer

Guide Book

To make Top-quality 3D printer

- ◆ This guide is for the Ender-3 Pro Series of 3D printers.
- Select the correct input voltage to match your local mains (230V or 115V)
- ◆ Because of software/hardware upgrades and model differences, new revisions may not be listed in this guide.
- ◆ Please plug the power cord into a three-hole power jack.
- ◆ Detailed instructions for use are available on the TF card.



Notes

- 1. Do not use the Printer in any way other than described herein to avoid personal injury or property damage.
- 2. Do not place the Printer near flammables, explosives or heat sources. It is best to place it in a well-ventilated, low-dust environment.
- 3. Do not expose the Printer to violent vibration or any unstable environment. This will cause poor print quality.
- 4. The filaments recommended by the manufacturer are preferred as to avoid clogging in the hot end and/or Printer damage.
- 5. Do not use any other power cable than the one supplied. Use a grounded three-prong power outlet.
- 6. Do not touch the nozzle or hot bed during printing. Keep hands away from machine while in use to avoid burns or personal injury.
- 7. Do not wear gloves or loose clothing when operating the Printer. These loose articles can become caught in moving parts and cause personal injury or Printer damage.
- 8. Clean off filament from the nozzle tip with the provided pliers before the nozzle cools. Do not touch the nozzle directly. This can cause personal injury.
- 9. Clean the Printer frequently. With the machine powered off, clean the printer body with a dry cloth to remove dust, adhered printing materials and foreign objects on guide rails. Use glass cleaner or isopropyl Alcohol to clean the print surface before every print for consistent results.
- 10. Children under 10 years of age should not use the Printer without supervision.

Contents

1.	Introduction	5.	Software Installation9
2.	Screen Information2	6.	Preparing to Print10
3.	Loading Filament3	7.	Trouble-shooting11
4	Bed Leveling4	8.	Circuit Wiring Diagram

Preface


Dear consumers,

Thank you for choosing our products. For the best experience, please read the instructions before operating the Printer. Our 3D team is always ready to provide you with assistance. Please contact us via the phone number or e-mail address provided at the end when you encounter any problem with the Printer.

For a better experience in using our product, you may learn how to use the Printer in the following ways:


- 1. View the accompanied instructions and videos on the TF card.
- 2. Visit our official website at <u>www.creality3d.cn</u> You will find relevant software/hardware information, contact details and operation and maintenance instructions on the website.

1. Introduction

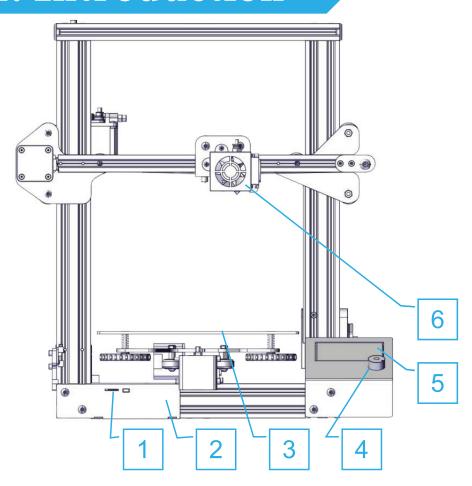

- 1. TF Slot and USB Port
- 2. Control Box
- 3. Print Surface
- 4. Control Knob

- 5. Display Screen
- 6. Nozzle Assembly
- 7. Spool Holder
- 8. Extruder (E) Stepper

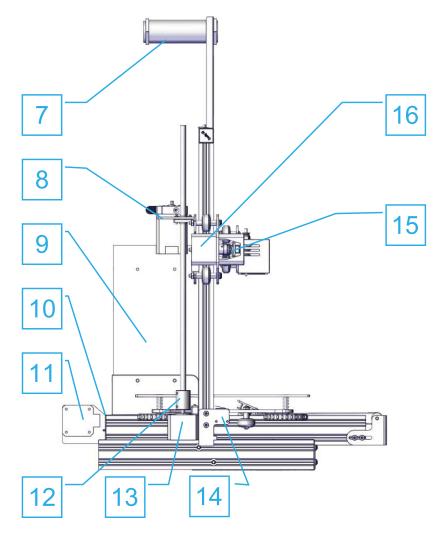


- 9. Power
- 10. Y Limit Switch
- 11. Y Stepper
- 12. Coupling

- 13. Z Stepper
- 14. Z Limit Switch
- 15. X Limit Switch
- 16. X Stepper

2. Screen Information


Information Displayed

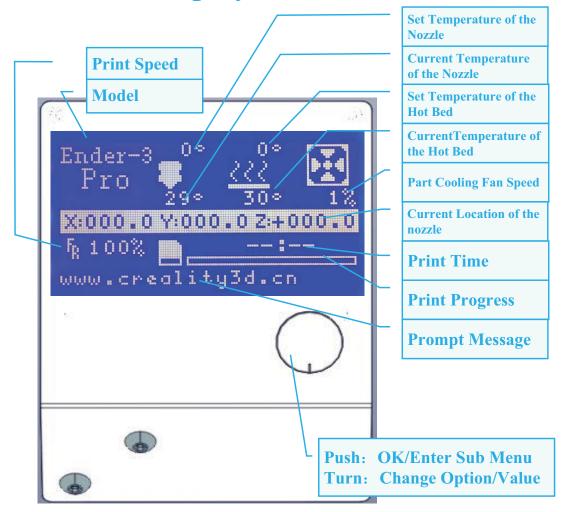


15	Screen Opti	ons
Menu	Sub Menu	Explanation
↑Info Screen↑	† main †	Return
	Disable Steppers	Moving X Y Z axis by your hands
	Auto Home	return to the origin
	Preheat PLA	
D	Preheat ABS	
Prepare→	Cooldown	Close and cooldown the nozzle
	Move Axis→	Moving X Y Z axis or Extruder by given value.
Control→	Temperature→	Heat the nozzle and the bed or change fan speed by given value
NAME OF THE PARTY	Restore Failsafe	Restore factory setting
No card /Print from SD	Select the	printing model
Init. SD-Card /Change SD-Card		
	Pringting	·
	Speed	Change Printing Speed by given value
	Nozzle	Change the temperature by given value
Tune→	Bed	Change the temperature by given value
	Fan Speed	Change Fan Speed by given value
	Flow	Change filament flow by given value
Pause Print		
Stop Print		

3. Loading Filament

 1. Preheat Method 1




Method 2

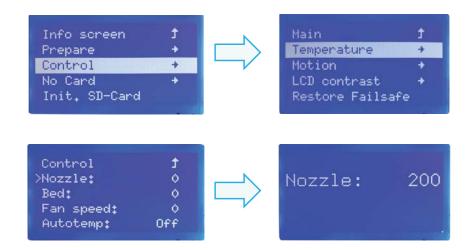

2. Feeding



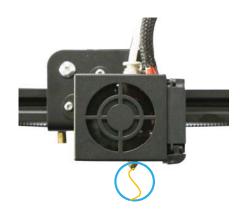


Press and hold the extruder lever then insert 1.75mm filament through the small hole of the extruder. Continue feeding until you see filament come out the nozzle.


Tip: How to Replace the Filament?

- 1. Cutting filament near the Extruder and slowly feed new filament until they are fed into the new filament.
- 2. Preheating the nozzle and withdraw the filament quickly and feed the new filament.

 4. Bed Leveling



 1. Prepare \rightarrow Auto Home. Wait for the nozzle to move to the left/front of the platform.




2. Prepare→Disable Steppers(Close stepper drive, release motor)





- 3. Move the nozzle the front/left leveling screw and adjust the platform height by turning the knob underneath. Use a piece of A4 paper (standard printer paper) to assist with the adjustment, making sure that the nozzle lightly scratches the paper.
- 4. Complete the adjustment of the screw on all 4 corners.
- 5. Repeat above steps 1-2 times if necessary.

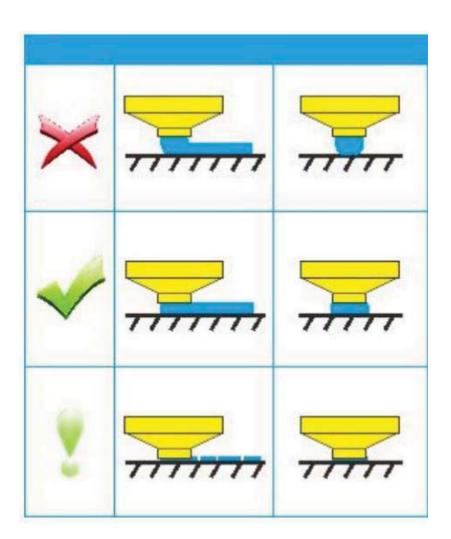


5. Software Installation



1. Double click to install the software.



2. Double click to open the software.

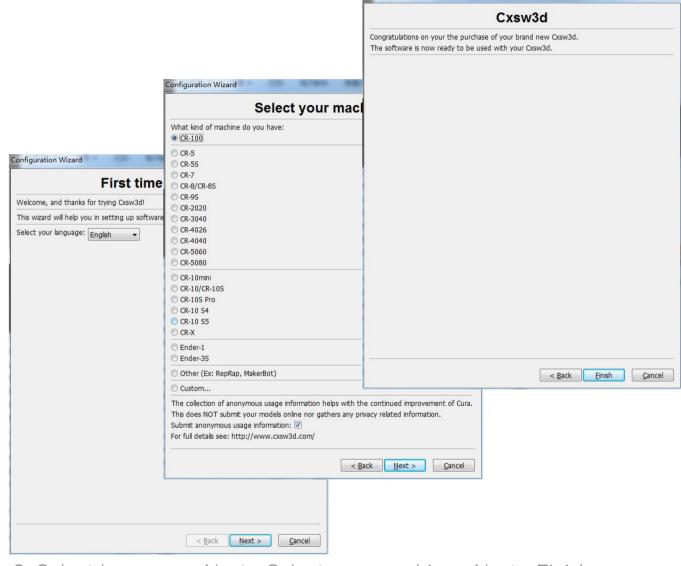


Configuration Wizard

3. Select language \rightarrow Next \rightarrow Select your machine \rightarrow Next \rightarrow Finish.

6. Preparing to Print


1.Slicing

Insert TF card into computer with Reader.

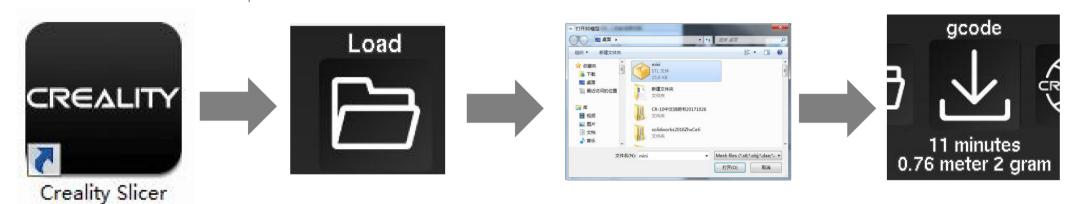


Open the software—Load—Select the file—Wait for slicing to finish ,and save the gcode file to TF card.

2.Printing

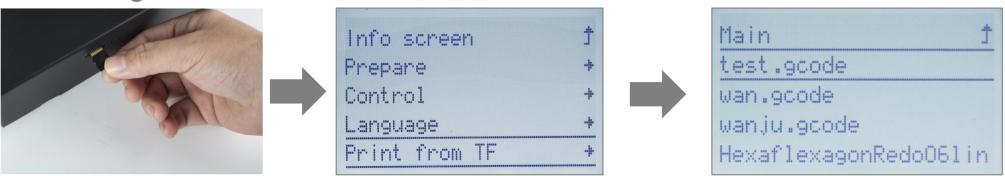


Insert the TF card→Select Print from TF →Select the file.

7. Trouble shooting

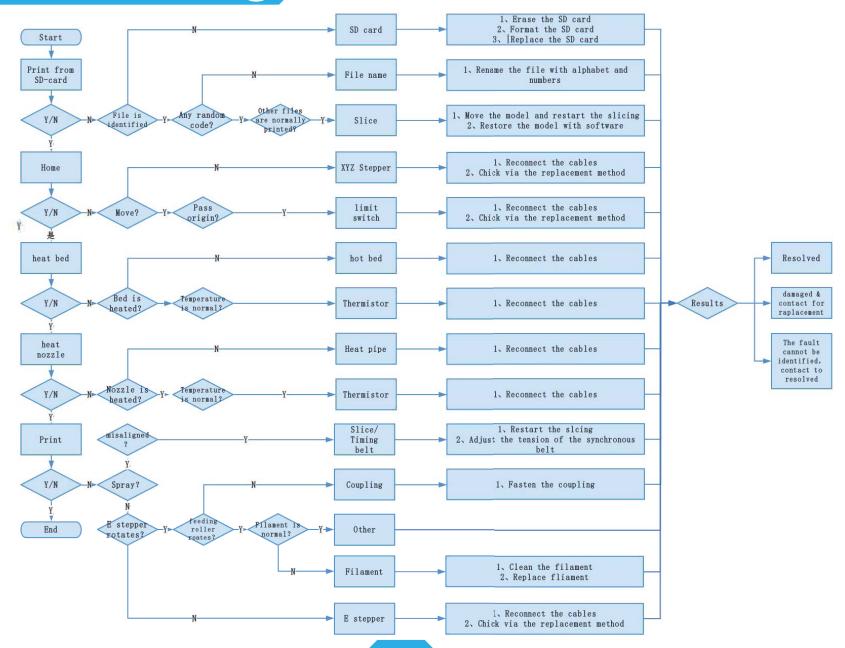

8. Circuit Wiring Diagram

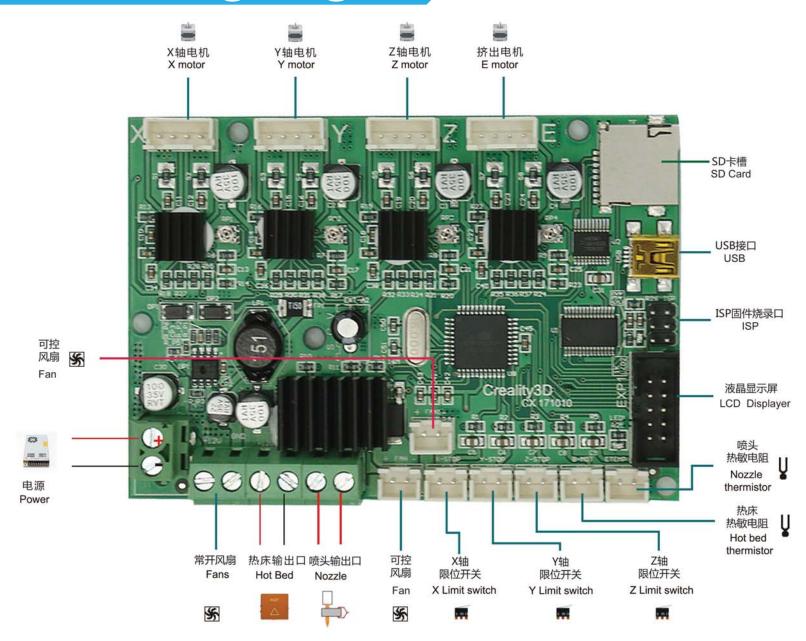





SHENZHEN CREALITY 3D TECHNOLOGY CO., LTD.

12/F, Block 3, JinChengYuan, Huafan Road, Tongsheng Community, Dalang, Longhua District, Shenzhen, China, 518109 Official Website: www.creality3d.cn Tel: +86 755-2105 9455

E-mail: info@creality3d.cn cs@creality3d.cn







